


Pos.	KEPES #	Description	Qty
1	200002	Bearing, drive side	4
2	730082	Drive shafts	2
3	730085	Slittershaft, T36	2
4	200010	Bearing, idler side	2
5	600747	Bearing holder	2
6	407560	Transport collar, with rubber	
7	407609	Blade holder, narrow	
8	407562	Transport collar, steel	
9	407561	Counter knife, standard, single sided	
10	407564	Center trim, complete	
11	407606	Counter knife, narrow, double sided	
12	600722	Ejector wheel, complete	

For perforators, slitters, and scores;

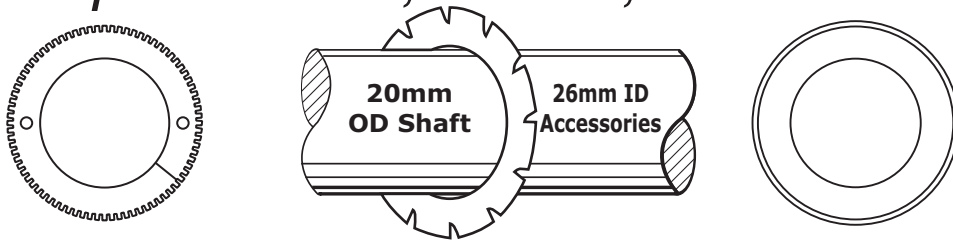

kepesparts.com

Helpful Hints - While installing your rollers, be sure to check:

- Fold plate and deflector settings
- “Zero” the roller tension settings
- Check drive belts and pulleys for wear
- Inspect in-feed guide and belt for wear
- Clean or replace air pump filters (and vanes if applicable)
- Inspect electrical connections between units
- Inspect and clean the suction valve and wheel
- Check transport collars for wear, recover or replace if needed

For instruction on how to check these items
or if you have any other questions, call 262-652-7889